

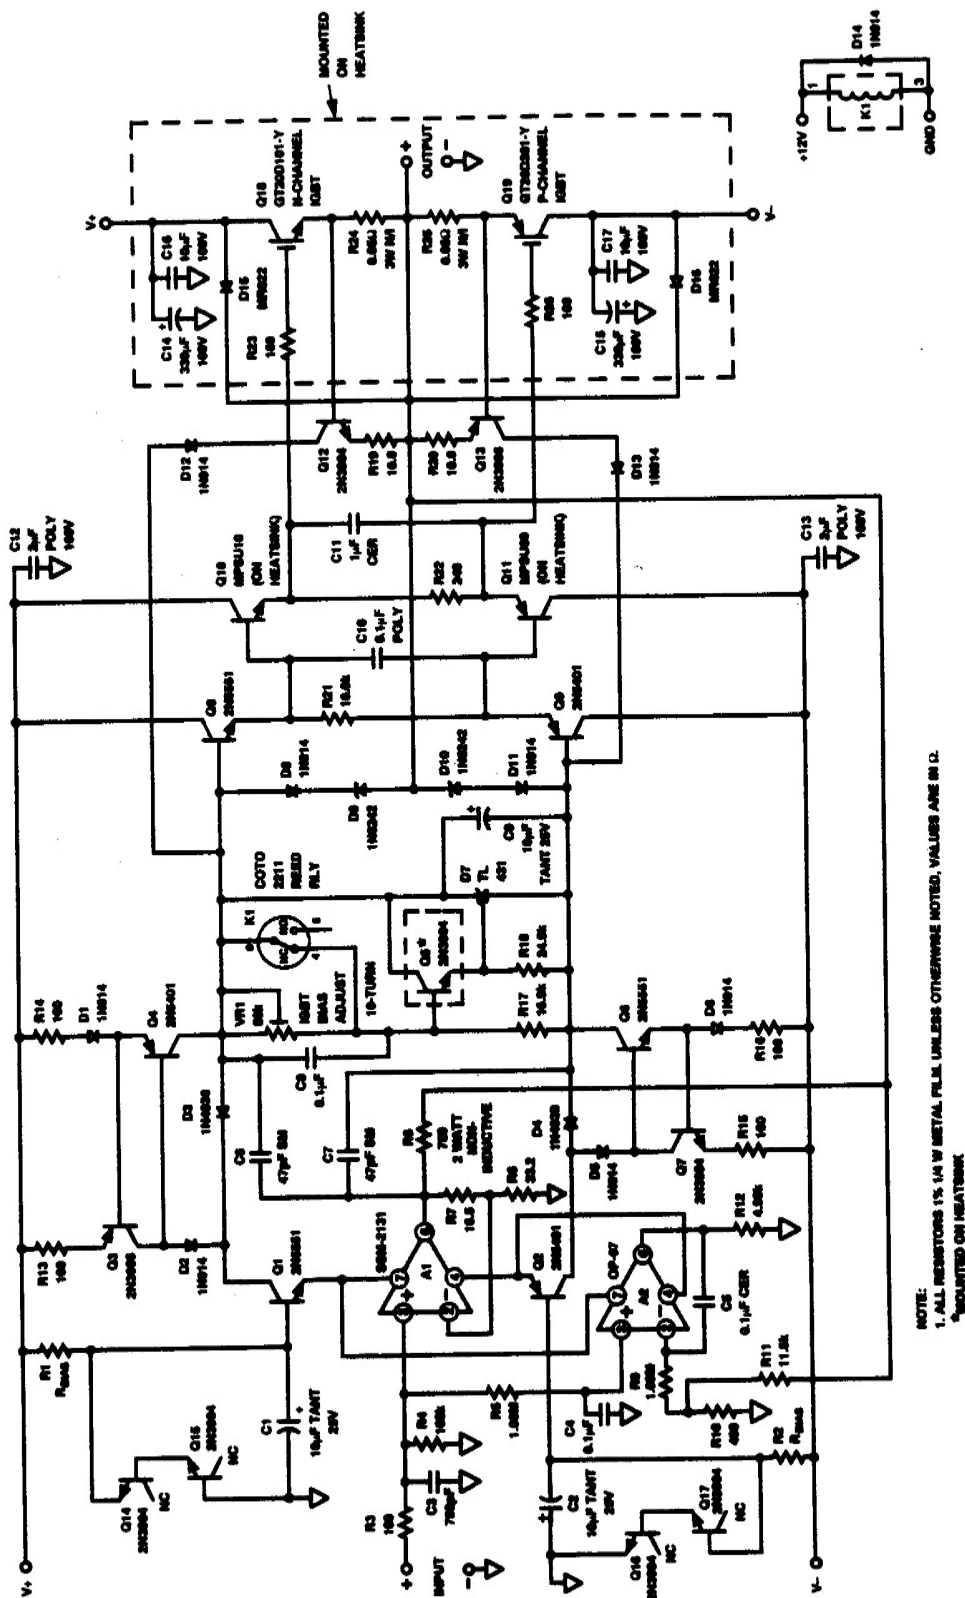


Figure 3. The Complete Amplifier Circuit Diagram Shows that Inexpensive Small-Signal Silicon Is Used Throughout to Minimize Overall Cost.